


# Save **Time** and **Money** on Your Next **Grinder Pump** Install

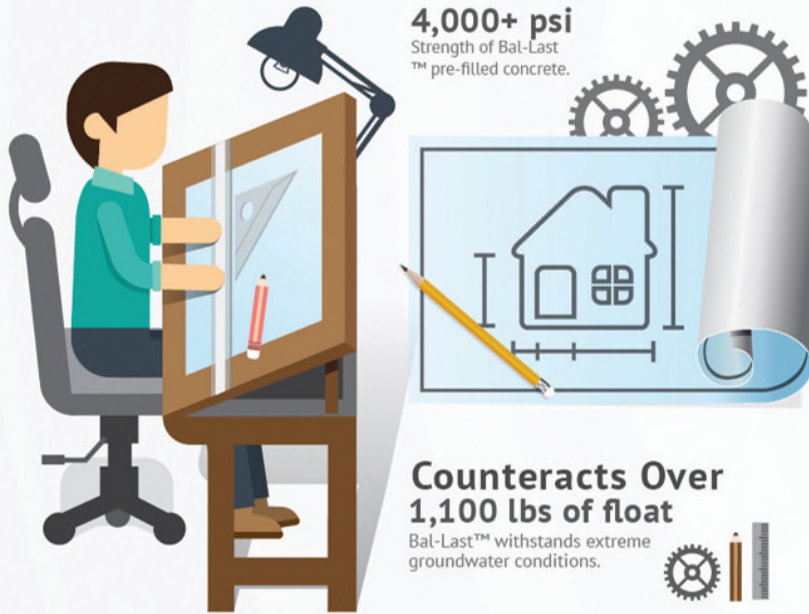

**DON'T LET WEATHER RAIN ON YOUR PARADE**  
Weather can adversely affect the final strength of poured concrete.

**RAIN**  
Too much water in the mix can weaken concrete.

**HEAT**  
Heat can damage the integrity of concrete as it sets.

**COLD**  
Cold can prevent concrete from setting.

**SOIL**  
Regardless of the sky, the ground can be wet or frozen.



**SAVE 20-40%**  
Over the cost of mixing your own concrete.



**EASY**  
DROP-IN HARNESS  
Install your pump with ballast already applied.

**SECURE**  
PROTECT YOUR PUMP  
Bal-Last™ is ideal for tricky soil conditions.

**FAST**  
DON'T WAIT AROUND  
Don't waste time waiting for the concrete truck.

**EXCEEDS**  
MANUFACTURER REGULATIONS  
For ALL station heights.

**FLEXIBILITY**  
4 EXPANSION JOINTS  
Moves with shifting soil for added strength.

Cost to mix your own:

LABOR (2 MEN)	\$85/h
FORM MATERIAL	\$50
CONCRETE	\$35-\$70
BACKHOE IDLE	\$160
<b>TOTAL COST</b>	<b>\$450</b>

**LEARN MORE** visit: [www.interlockingballast.com](http://www.interlockingballast.com) | email: [henry@interlockingballast.com](mailto:henry@interlockingballast.com)